

Install the set exactly as indicated in the drawing*** and make sure that you have removed all connections between the DVD player and the TV!

This will simplify the adjustment to the correct AV input on your TV.

You also need to ensure that all plugs are correctly and firmly connected.

Does the TV show images, but you cannot hear the sound of the microphones?

You have not tuned in on the correct AV input of your TV.

Please read item 2 of the user's manual carefully.

Or

The volume has not been turned on or is set at a low volume.

You will hear the sound of the microphones through the speakers of your TV.

This is also the case when you use a Home Cinema Set!

How can I check whether I have tuned into the correct AV input on the TV?

Remove the yellow cable from the TV for a moment whilst the DVD is playing.

- When the images are no longer displayed, you have tuned in on the correct input
- When the images remain, you have not tuned in on the correct input.

You do not see any images after having removed the scart cable?

This is correct! As soon as you remove the scart cable, the images will disappear. The images will return as soon as you have selected the correct AV input by following step 2

with the use of the remote control of your TV (the images (video) are transported through the yellow cable.)

That is why it is advisable to let your DVD player play before selecting the correct input.

This only applies when there is one connection between the Karaoke Transformer and the TV, as indicated in the drawing. You have found the correct AV input when the images return to your screen.

***** What to do if your DVD player does not have red/white/yellow AV output plugs?**

You can also use the scart output of the DVD player! An OUTPUT scart adapter for your DVD player is not included in the Karaoke Studio and is available for approx. € 4.- at all audio stores, or can be obtained for free by e-mailing service@dpspecials.com.

***** Does your DVD player have 2 scart output plugs?**

Often only one of the two scart output plugs can be used!

The other scart output is meant for other equipment such as Media Boxes! That is why you need to use the scart output plug you always use(d) for your TV. This output is often indicated by "AV OUT" or "AV to TV".

***** What to do if your TV does not have any AV input (red/white/yellow) plugs?**

Then you also need to use the scart input of your TV, by using an INPUT scart adapter.

A scart adapter for your TV is not included in the Karaoke Studio and is available for approx. € 4.- at all audio stores, or can be obtained for free by e-mailing service@dpspecials.com.

Do you have a Home Cinema Set?

The sound from the microphones will come through the TV speakers and not through the Home Cinema speakers. That is why the volume of the TV must be switched on, at a slightly higher volume than normal.

Would you like to hear the sound of the microphones through the Home Cinema Set speakers?

To achieve this you would need an amplifier or a similar device with an audio (red/white) connection.

You then need to connect the red and white AV cables which are plugged into your TV to your amplifier.

Would you like to use the Xbox or Play station?

No problem! You just use your game console as a DVD player. Your game console will already have an AV cable (red/white/yellow). You just need to connect these to the input plugs of

the Karaoke Transformer: "IN" from DVD Player. You will have one set of AV cable of the Karaoke Studio left over.